

USER

MANUAL

LSM TYREGUARD® RV360 TMSYSTEM

Please read this manual carefully before
using this product.



LSM TYREGUARD® RV360

The LSM TYREGUARD® RV360 is designed solely to monitor tyre pressures and wheel temperatures (on short solid stems) . It is not designed to provide warning of a potential or actual tyre blowout.

TABLE OF CONTENTS

USER MANUAL	1	VII. FAQs AND TIPS	29
LSM TyreGuard® RV360	1	FREQUENTLY ASKED QUESTIONS	29
LSM TYREGUARD® RV360	2	TIPS	34
SYSTEM COMPONENTS	6	LIMITED WARRANTY	35
GLOSSARY OF TERMS	7	SPECIFICATIONS	36
II. SETUP AND INSTALLATION	8		
INSTALLING THE MONITOR	8		
PROGRAMMING THE MONITOR	9		
PROGRAMMING THE SENSOR LOCATION	10		
BASELINE PRESSURE PROGRAMMING	13		
PROGRAMMING DATE AND TIME FOR STORED ALARM HISTORY INFORMATION	15		
PROGRAMMING THE UNIT OF MEASURE	17		
DELETE SENSOR LOCATION	18		
HIGH PRESSURE ALARM PROGRAMMING	20		
III. INSTALLING THE SENSORS ON THE VEHICLE	21		
IV. ALARM MODES	23		
VI. NORMAL MODE ACCESSORY FUNCTIONS	26		
DROP AND HOOK FEATURE	26		
SYSTEM RESET	27		
STORED ALARM INFORMATION	28		
BACKLIGHT ON FOR NIGHT OPERATION	29		

The [LSM TyreGuard® RV360](#) is a full-time wireless electronic tyre monitoring system (TMS) designed to monitor and display tyre pressures from 69 kpa (10 psi) up to 1,300Kpa (188 psi). It is capable of displaying current tyre pressure on demand, whether moving or stationary. The LSM TyreGuard® RV360 is a monitoring system and will not prevent tyres from losing pressure or failing. However, low pressure is the leading cause of premature tyre failure and the LSM TyreGuard® RV360 can provide early notice of potential problems and assist in maintaining proper pressurization in vehicle tyres. The LSM TyreGuard® RV360 can be used on all pneumatic tyres.

The LSM TyreGuard® RV360 consists of two basic components: tyre sensors which screw onto the valve stems of tyres, and a monitor. Sensors transmit a coded RF signal and alert if pressure drops. The monitor displays each tyre's pressure and an audible alert if tyre pressures drop. During an alert, the low tyre location is displayed on the monitor, the monitor will display LOW PRESSURE, the current pressure reading for that tyre flashes, and an audible alert sounds. The system can alert at 2 levels: The first alert occurs when pressures drop more than 12.5%. A second more urgent alert occurs if tyre pressures drop more than 25%. As with many RF products, signal interruption can occur and prevent a signal to reach the monitor. When used properly, the LSM TyreGuard® RV360 will inform the driver of the tyre pressures on the vehicle so the operator has the opportunity to make any necessary adjustments to the air pressure before a serious problem may occur.

 Tyres and valve stems should be inspected thoroughly prior to installation of the system to ensure they are in good condition and inflated properly. It is not uncommon to find valve stems that need replacing when installing the LSM TyreGuard® RV360 system. LSM Technologies recommends that rubber valve stems be replaced with metal stems. Some rubber stems have been found to be inferior and could fail prematurely.

Regular tyre and valve stem visual inspections are recommended. A damaged sensor, tyre, or valve stem can cause pressure loss. Inspect regularly. If faults are repeatedly observed, discontinue use of the system and contact LSM.

 LSM recommends that for On- Road use rubber valve stems be replaced with short brass or stainless steel stems as some rubber stems have been found to be inferior and can cause premature failure.

 **Wheel / Rim Temperatures:** So as to provide accurate and quick response to wheel / rim over temperature (**HOT**) alerts then only short solid steel stems should be used for attaching the wheel Sensors.

 The LSM TyreGuard® TMSystems cannot prevent tyre / wheel overload. Overloading any tyre is extremely dangerous and can cause the failure of any suspension component, not just tyres! The only way to detect overloading is to weigh the vehicle. A vehicle should never be operated if the weight on any wheel is greater than the design specification. Even a correctly inflated tyre can fail if overloaded.

 Tyres can fail for other reasons besides low pressure or overloading. Stay alert and watch for other tyre problems that may be indicated by unusual noises, vibrations, uneven tread wear, or bulges on the tyre. If any of these symptoms occur, have the tyres checked immediately by a professional!

SYSTEM COMPONENTS

- Display Monitor w/ fused 12 / 24-volt power cord and receptacle
- Sensor for each tyre position purchased
- Sensor lock w/ wrench for each tyre position purchased
- Visor clip/ fastener tape mounting kit
- Adjustable pedestal mounting kit
- Dill valve tester
- Installation and Operation Manual



! If you are missing any of these components, DO NOT proceed with the installation. Contact LSM Technologies for any missing or replacement parts.

GLOSSARY OF TERMS

Normal Mode: When monitor is monitoring all programmed sensors and there are no faults, the monitor will display a green light and the display will show **ON**.

Alert Mode: When the monitor has received a signal that is outside of the parameters of the Normal Operation an alert will be displayed with icons describing the fault along with an audible beeping sound. Pressing the Set or Program buttons can turn off the audible alarm.

Baseline Air Pressure: This is the pressure that is programmed into the monitor to identify what the pressure is to be in each tyre position. The monitor will calculate all alarms from this setting. The baseline pressure should ALWAYS be set when tyres are at ambient temperature.

Ambient Temperature: This is the temperature of the outside air. Tyres can heat up significantly which will change the pressure in a tyre. If pressures in the tyres are set when the tyre temperature is elevated, it can cause the monitor to give alerts because when the tyres cool the pressure will drop and sometimes this will fall 12.5% below the baseline pressure.

RF: The term used to identify Radio Frequency signals.

II. SETUP AND INSTALLATION

INSTALLING THE MONITOR

The LSM TyreGuard® RV360 gives the user multiple options for mounting the monitor for viewing. You have the option to place on the sun visor, attach to the windshield, fasten to the dash, attach using the pedestal mount, or the ability to use the hook and loop pads to fasten the monitor to a flat surface. If you are using the hook and loop pads, we suggest that the surfaces that you are applying the pads to be cleaned with alcohol to remove any grease or oils that could be present. Choose the monitor back panel which will work best for your situation. Remove the proper small breakaway tab to allow the power cord to exit in the best direction for your setup (See Figure 1-1).



Figure 1-1

A. The convenient way to wire the monitor is to attach the accessory cigarette lighter adapter on the power cord to the 12 or 24 volt power receptacle. This method is the quickest, however it does not allow you to receive the full benefits of the LSM TyreGuard® RV360. Using the accessory cigarette lighter adapter plug for your power source will delay information to the monitor if the power is removed when the vehicle is turned off and the power is removed from the receptacle. However, if the power remains on to capture warnings that occur during the night hours, audible and visual alarms may activate, disrupting your sleep. That is why we suggest that you use option B for wiring your monitor.

B. In order to access the full benefits of the system you will need to hard wire the monitor to the vehicles' electrical system. The cigarette power adapter will need to be removed from the power cord and then you will see that there are three wires in the harness (we suggest that you leave a few inches of wire on so you can use the plug at a later date for something else).

- The **Red** is the 12/ 24 volt positive constant connection. This should be connected to a 12/ 24 volt power source that is always **ON**.
- The **Blue** wire will be the switched 12/ 24 volt positive connection. This wire should only be live when the key is in the **ON** position. The **BLACK** wire is to be connected to a good ground. This hook-up will allow the monitor to receive signals when the vehicle is not running and update the monitor in real time. When the key is turned on you will have the current information for your tyre condition immediately before you begin your next trip.

 The monitor is fused internally, however some installers would still prefer to install an inline fuse. We suggest an optional 5.0 amp slow blow fuse be used for this purpose.

The first time the monitor is powered up the display will show **NSP**.

This is saying that there are No Sensors Programmed to the monitor. It could be that the sensors that were programmed to the monitor have not reported into the monitor in order to lock the sensors into the memory. If this is the case it could take up to 6 minutes for this to happen. If this is the first time you have attempted to install the system and the sensors have not been programmed into the monitor, the system will need to be programmed per the following section.

PROGRAMMING THE MONITOR

For the monitor to function effortlessly, the user must install the correct data. The information input to the monitor will allow the monitor to recognise the sensors and wheel positions as well as the baseline pressures for all tyres. This is done in the following steps.

Do not install sensors on the tyres until all programming is completed and the monitor is returned to the normal operation mode.



"S" is used to select tyres, lock in programming selections, and used to turn the backlight on and off

(4) Arrow buttons are used to navigate the screen and select values in the program mode

"P" is used to enter the program modes. Also used to silence alarms.

PROGRAMMING THE SENSOR LOCATION

1. Be sure that the power is on. The first time the monitor is switched on; the display should show **NSP**. This will signify that no sensor is programmed, or the monitor has not received a new sensor signal yet. If this is the case it could take up to 6 minutes for the sensor to report in if it is already attached to the valve stem. You will now need to enter into the programming mode, if you need to add sensors to the monitor. If you are entering new sensors into the monitor be sure to leave the sensors off of the valve stems until the programming is complete.
2. Press and hold the P button for approximately 5 seconds, the monitor screen will automatically change over to the program mode, and then you can release the button. When you have entered this mode the monitor will display all of the tyre positions and the word PROGRAM will be displayed (See Figure 2-1).

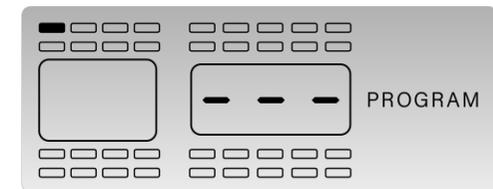


Figure 2-1



Figure 2-2

As you will see by **Figure 2-1** the monitor can be set up to display a motor home pulling a car or trailer, or a car / truck pulling a trailer.

3. Select a tyre position using the arrow buttons and input the 3-digit serial number located on the sensor into the monitor (See **Figure 2-2** for the three-digit number). The monitor will automatically capture the serial number and information when air pressure is supplied to the sensor for that wheel position and lock it into the monitor. Be sure to keep the sensors identified as to which wheel positions they belong so that you can attach the sensors to their proper location for future reference. Use the diagram in **Figure 2-3** to record the 3 digit numbers onto the wheel locations that you will be selecting.

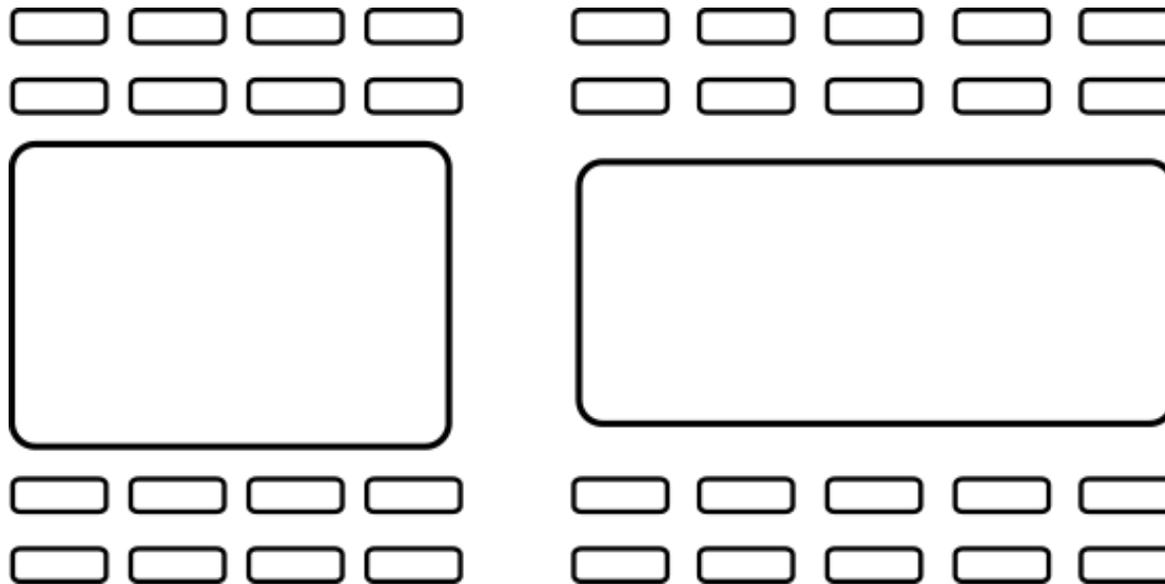


Figure 2-3

- Using the arrow keys select the first tyre position that you want to program. The selected wheel location will be solid. The other wheel positions will only be an outline. If sensors have already been programmed to the monitor, the only sensor locations that will be displayed will be the ones that do not have a sensor already programmed to it. When you have selected the position that you want to program a sensor to, press the SET button for 3 seconds. This will cause the first dash (See Figure 2-4) of a three-digit sensor number to blink that will need to be entered.
- Using the up and down arrow buttons, change the first digit to the first corresponding digit of the sensor ID number that you want to program. When you have selected the correct digit press the right arrow button to move to the next digit in the display.
- The centre dash (-) of this digit will now blink (See Figure 2-5). Use the up and down button to change this digit to the number needed for the second digit of the sensor. When you have selected the correct number for the centre section of this number press the right arrow button so the remaining dash (-) begins to flash (See Figure 2-6).
- Adjust this position with the up and down button until you have the correct number displayed. Pressing the right or left arrow button will allow you to change one of the numbers that you have previously selected if needed.
- If you have the correct number displayed, press the S button for 3 seconds until the number flashes twice and you hear a beep twice to signify that the sensor ID number was successfully input to the monitor (See Figure 2-6a).
- A new position will be highlighted to input another serial number. If you wish to program another sensor repeat the above steps.

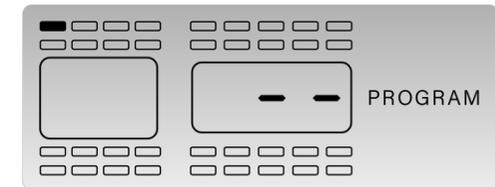


Figure 2-4

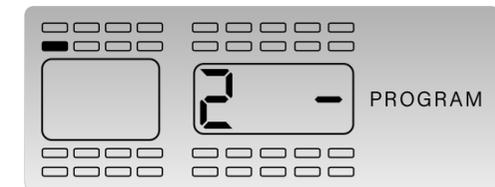


Figure 2-5

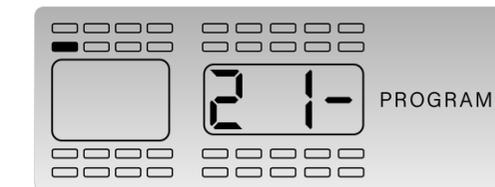


Figure 2-6

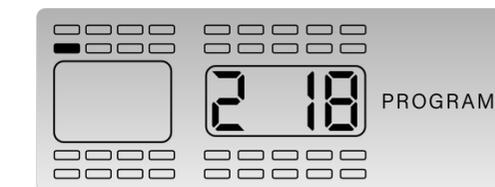


Figure 2-6a

10. Once you have completed the sensor programming sequence for all tyres, press the PROG button momentarily to move to the next step, this will be the Base Line Pressure Programming. The monitor will display as shown in **Figure 2-7**. If you are completely done with all of the programming operations you can press the PROG button for 5 seconds and the monitor will return to the normal mode of operation. This can be done at the end of any section of the program mode when the programming is completed.

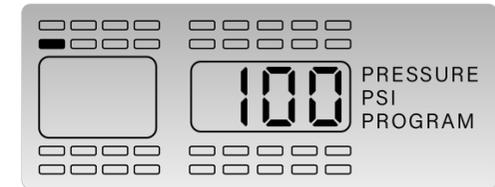


Figure 2-7

BASELINE PRESSURE PROGRAMMING

NOTE: To enter directly into this program mode you will need to press the “P” button for 5 seconds until the word PROGRAM is displayed. Then press the “P” button again briefly to enter this mode (see Figure 2-7 for screen display).

NOTE: To skip this section and go directly to Programming the Date and Time for Stored Alarm History Information just press the “P” button briefly 1 time. The display should look like **Figure 2-10**. Anytime during this mode you can escape out to the next program mode by pressing the “P” momentarily.

The baseline pressure has been set in the factory at 689 Kpa (100 psi) for all wheel positions. **⚠ We recommend that you set the baseline pressure at the same pressure as your recommended Manufacturers Operating Tyre Pressures for each vehicle’s tyre being monitored.** If you want to change the baseline pressure, or a new sensor is programmed, then follow the procedure below.

The monitor should now be displaying the wheel positions available to program, the words PRESSURE, the unit of measure (PSI, Bar, or kPa) and PROGRAM will be displayed as well as the baseline pressure for the

selected wheel position (See Figure 2-7). The positions that already have sensors programmed to the monitor will be highlighted at this time (See Figure 2-8). You can program the air pressure from 34.5 kpa (5 psi) to 1,300 kpa (188 psi), depending on your needs. Each wheel position can be set with a different baseline air pressure if this is what is needed. The monitor has been pre-programmed for 100 PSI at each wheel position. If this is the baseline air pressure that you need then you will not have to do anything in this mode and can press the P button and go to the next step. If you need to change the baseline air pressure for a wheel position, continue with Steps 1-4 below:

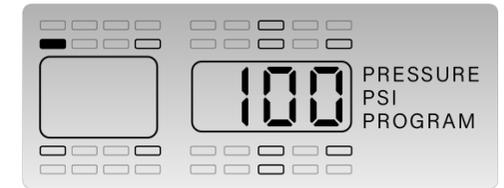


Figure 2-8

1. Using the same procedure as done previously, use the arrow buttons to select a wheel position and press the "S" button for 3 seconds. This will cause the first dash or number to blink (See Figure 2-9) of a three-digit baseline pressure number that will need to be entered for the tyre position selected.
2. The first digit of the three dashes will automatically start to flash. To adjust the air pressure for the first digit press the up or down arrow button to change the number. For a number less than 100 you will need to start your number with a 0. For the air pressure of 655 kpa (95 psi) your imputed number for the baseline pressure would be imputed as 655 (095).
3. Press the left or right arrow button to select the next digit. Use the up and down arrow buttons to change that digit. When you have entered the number that you want, press the "S" button for 3 seconds until the number flashes twice and a double beep is heard to signify that the number has been locked into the monitor's memory.
4. A new position will be highlighted to input a baseline air pressure. If you wish to program another sensor repeat the steps 1 through 3. If you have completed the sensor baseline air pressure programming sequence then you can press the PROG button momentarily to move to the Time and

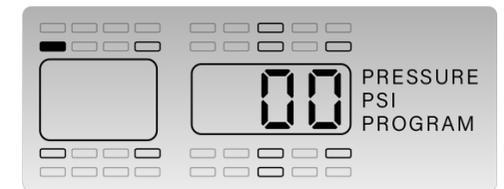


Figure 2-9

Date -stamp setting mode. If you are done with the programming operation you can press the “P” button for 5 seconds and the monitor will automatically return to the normal mode of operation. This can be done in any section of the program mode when the programming is completed.

PROGRAMMING DATE AND TIME FOR STORED ALARM HISTORY INFORMATION

NOTE: To enter directly into this program mode you will need to press the “P” button for 5 seconds until the PROGRAM is displayed. Then press the “P” button again briefly 2 x times to enter this mode (see Figure 2- 10 for screen display).

NOTE: To skip this section and go directly to Programming the Unit of Measure section, just press the “P” button briefly 1 x time. The display should look like **Figure 2-17**. Anytime during this mode you can escape out to the next program mode by pressing the “P” momentarily.

1. The first thing that you will adjust is the Year (Y). Pressing the “S” button for 3 seconds will cause the centre digit after the Y to flash (**See Figure 2-11**). This should remain at 0 until the year 2010, and then it will be changed to a 1. Pressing the up and down arrow buttons will adjust the value of this digit. When you have selected the number that you want, press the right button to adjust the right digit in the same manner with the up and down arrow buttons. When you have the proper number displayed for the year (Y) press and hold the “SET” button for 3 seconds until the monitor beeps twice and the display flashes twice. (The monitor will now display like **Figure 2-12**).
2. To adjust the Month (M) you will need to press and hold the “S” button until the centre digit flashes. The months will be displayed as (01) for January thru (12) for December. Pressing the up and down arrow buttons will adjust the value of this digit. When you have selected the number that you want press the right button to adjust the right digit in the same manner with the up and down arrow buttons. When you



Figure 2-10



Figure 2-11



Figure 2-12



Figure 2-13

have the proper number displayed for the Month (M) press and hold the "SET" button for 3 seconds until the monitor beeps twice and the display flashes twice. (The monitor will now display like **Figure 2-13**).

3. To adjust the Day (d) you will need to press and hold the "S" button until the centre digit flashes. Pressing the up and down arrow buttons will adjust the value of this digit. When you have selected the number that you want press the right button to adjust the right digit in the same manner with the up and down arrow buttons. When you have the proper number displayed for the Day (d) press and hold the "S" button for 3 seconds until the monitor beeps twice and the display flashes twice. (The display is shown like **Figure 2-14**).
4. To adjust the Hour (h) you will need to press and hold the "S" button until the centre digit flashes. Keep in mind that the hour will be displayed as a 24 hour clock. An example is that 3:00pm in the afternoon will be shown on the clock as h15. Pressing the up and down arrow buttons will adjust the value of this digit. When you have selected the number that you want press the right button to adjust the right digit in the same manner with the up and down arrow buttons. When you have the proper number displayed for the hour (h) press and hold the "S" button for 3 seconds until the monitor beeps twice and the display flashes twice. (The monitor will now display like **Figure 2-15**).
5. To adjust the Minute (M) you will need to press and hold the "S" button until the centre digit flashes. You will notice that the Month and Minute both use the (M). Pressing the up and down arrow buttons will adjust the value of this digit. When you have selected the number that you want, press the right button to adjust the right digit in the same manner with the up and down arrow buttons. When you have the proper number displayed for the Minute (M) press and hold the "S" button for 3 seconds until the monitor beeps and the display flashes twice. (The monitor will now display like **Figure 2-16**).



Figure 2-14



Figure 2-15



Figure 2-16

- This will have brought you back to the (Y) years setting. Press the “P” button momentarily to move to the Pressure Units Programming Mode (See **Figure 2-17**). If you are done with the programming operation you can press the “P” button for 5 x seconds and the monitor will automatically return to the normal mode of operation. This can be done in any section of the program mode when the programming is completed.

PROGRAMMING THE UNIT OF MEASURE

NOTE: To enter directly into this program mode you will need to press the “P” button for 5 seconds until the word PROGRAM is displayed. Then press the P button again briefly 3 x times to enter this mode (see **Figure 2-17** for screen display).

NOTE: To skip this section and go directly to the Sensor Deletion mode just press the “P” button briefly 1 x time. The display should look like **Figure 2-20**. Anytime during this mode you can escape out to the next program mode by pressing the “P” momentarily.

The next step in the programming mode is to select the unit of measure for the air pressure. The monitor is set from the factory to read in PSI (pounds per square inch) this is the default unit of measure. The monitor is also capable of displaying the air pressure in BAR and kPa (see **Figure 2-18 and 2-19**). If you want the monitor to read in PSI then nothing needs to be done except to press the PROG button to move into the next section of the programming mode. To change the units of measure do the following:



Figure 2-17



Figure 2-18



Figure 2-19

1. Press the left or right arrow to select the words PSI, BAR, or Kpa.
2. When you have your selection press the S button for three seconds and the selection should blink twice, and the beeper should beep twice to confirm the selection in the monitor's memory.
3. Press the P button to exit this mode and enter into the Delete Sensor Location mode next. If you are done with the programming operation you can press the P button for 5 seconds and the monitor will return to the normal mode of operation. This can be done in any section of the program mode when the programming is completed.

DELETE SENSOR LOCATION

This step is only used when a sensor is to be removed from the memory of the monitor. This would be used to remove a sensor from one position and locate it to a different location, or to remove a sensor. If deleting a sensor is not necessary at this time, please see the second note below:

NOTE: To enter directly into this program mode you will need to press the P button for 5 seconds until the word PROGRAM is displayed. Then press the P button again briefly 4 times to enter this mode (See Figure 2-20 for screen display).

NOTE: To skip this section and go directly to the High Pressure Alarm Programming mode just press the P button briefly 1 time. The display should look like **Figure 2-23 or 2-24**. Anytime during this mode you can escape out to the next program mode by pressing the P momentarily. If you want to return to the normal operation mode press and hold the P button for 5 seconds.

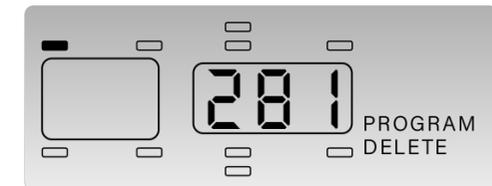


Figure 2-20

The monitor will display the available sensors to delete and the words PROGRAM and DELETE will be displayed on the screen (see Figure 2-20). If a sensor needs to be deleted you can just press the P button to go into the final program mode. If a sensor will need to be deleted you will need to complete the following steps:

1. Using the arrow keys select the desired sensor that need to be deleted. The monitor will only display the wheel positions that have a sensor programmed to that position. When you select a position the three-digit number that was programmed will be displayed so you will be able to verify that this is the correct serial number to delete (See Figure 2-21).
2. When you have selected the location press and hold the "S" button for three seconds. The three-digit number will flash twice, and the beeper will beep twice to confirm that this position has been deleted. A different position will be displayed and the tyre location that was deleted will now be gone (See Figure 2-22).
3. If you have additional sensors that need to be deleted repeat the steps until all required sensors are deleted. If you need to program deleted sensors to a different location, or add new sensors to the monitor's memory simply press the "P" button twice to enter into the Programming Sensor Location mode (see the section on Programming the Sensor Location).
4. When you are finished press the "P" button to enter into the HIGH PRESSURE program mode, which is the last item to program. If you are done with the programming operation you can press the P button for 5 seconds and the monitor will return to the normal mode of operation. This can be done in any section of the program mode when the programming is completed.

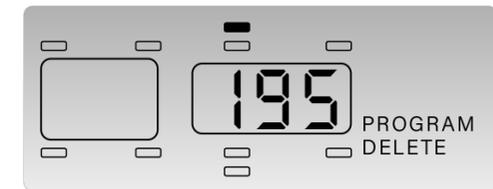


Figure 2-21

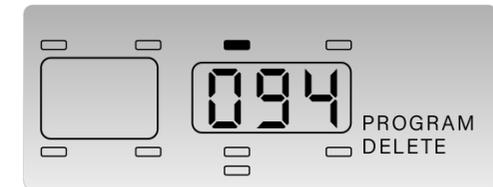


Figure 2-22

HIGH PRESSURE ALARM PROGRAMMING

NOTE: To enter directly into this program mode you will need to press the “P” button for 5 seconds until the word PROGRAM is displayed. Then press the P button again briefly 5 times to enter this mode (see Figure 2-23 for screen display).

NOTE: To exit this mode press the “P” button for 3 seconds to return to normal operation mode. The HIGH PRESSURE PROGRAM mode will allow you to set up your monitor to alarm if a pressure that is 25% higher than the baseline pressure is detected. This feature can assist in the checking of elevated heat in the tyre. Pressures increase with elevated temperature. The monitor will display HIGH, PRESSURE, and PROGRAM and the centre of the screen will display ON or OFF (See Figure 2-23 and 2-24). To turn on or off this feature do the following:

1. Using the left and right arrow buttons you will be able to turn this feature on and off as it is shown in the centre of the display.
2. When your selection has been made, the SET button will need to be pressed for three seconds to lock the selection into the memory of the monitor.
3. Pressing the “P” button briefly will rotate you back through the different programming modes. If you are done with the programming operation you can press the “P” button for 3 seconds and the monitor will automatically return to the normal operation mode. This can be done in any section of the program mode when the programming is completed.



Figure 2-23



Figure 2-24

III. INSTALLING THE SENSORS ON THE VEHICLE

The monitor should now be turned on and it should be in the normal operation mode.

! It could take up to six (6) minutes for the monitor to receive the updated signal from the sensors once the monitor has been activated if the monitor was powered down.

Be sure to inspect and replace any defective or cracked valve stems before installing the sensors. If replacements are necessary we suggest replacing the valve stems with a metal stem. It does improve the life of the stem due to premature failure from drying out and cracking. Inferior stems have been found in the market and can cause extensive damage.

! The dill valve at each tyre position should now be checked to see if it is in the proper position to allow the sensors to be activated by the air pressure from the tyres. This can be done using the enclosed Dill Pin Gauge (See Figure 3-1). When the gauge is used it should depress the dill pin enough to allow air to escape the valve stem (See Figure 3-2). If air does not escape from the valve stem, then you must use a valve stem tool to adjust the dill pin out far enough to allow the dill pin tool to release air from the valve stem. This should not be necessary with the LSM TyreGuard® RV360. The dill pin should not be extracted to the point that air is released all the time from the valve stem. This should be checked with a bit of soapy water if you do make an adjustment to the dill valve and after the sensors have been installed.

Keep in mind that tyre pressures will increase as you drive. When tyres are in motion, the sidewalls are under stress carrying the load of the vehicle. This energy created by the tyres develops heat, which causes the air in the tyres to expand. This can cause air pressure to increase as much as 10 psi in certain applications. This is normal, and the manufacturers' recommended cold running pressures have already taken this into



Figure 3-1



Figure 3-2



Figure 3-3

consideration. Always adjust air pressure when tyres are cold or ambient to the baseline pressures that were programmed into the monitor for each wheel position. Cool temperatures and high altitudes can cause tyres to lose pressure. If a tyre is close to its low-pressure level, an alert can be sounded when pressure drops overnight due to cooler temperatures. Inflate to proper level in the morning. If sensors have not been programmed to the monitor, or signals received by the monitor after first installed the screen will display **NSP** (See Figure 3-3).

1. If the sensors have been programmed to the monitor you will now need to install the sensors onto the proper wheel positions on the vehicle. The sensor should be tightened only by hand, not with a tool. Use a firm grip and tighten the sensor. Check for leaks with a soapy solution. The monitor will begin to receive and recognise the sensors, and display the wheel positions as they are received on the screen.
2. When all the sensors that have been programmed to the monitor are received and within the baseline air pressure parameters, the display will show all the wheel positions that were programmed, the word **ON** will be displayed on the screen, and the green LED light will come on (See Figure 3-4). You are now ready to enjoy the safety and comfort of your new LSM TyreGuard® RV360 System.
3. If any of the wheel positions are not within the baseline air pressures an alert will be issued by the monitor and the air pressure reading will be shown for the affected tyre position and the monitor will show **PRESSURE** and whether it is a **LOW** or **HIGH** warning. The audible alarm will be heard (see the section on Alarm Modes for further details about alarms).
4. If the monitor continues to search for a sensor after 10 minutes it is possible that the sensor may not be programmed properly. Higher radio frequency (RF) transmissions travel mostly via straight lines and along line-of-sight pathways. The LSM TyreGuard® RV360 sensors are required to accomplish the difficult task of transmitting a low power FCC approved signal from vehicles' tyres to the monitor. If a sensor fails to be recognised, move the monitor slightly. The vehicle could be in what is known as a



Figure 3-4

Dead Zone: this is where the signal is not able to travel because of its surroundings (pole barn siding, metal fence, side of a building). Moving the vehicle just a few feet can sometimes overcome this problem. The sensor will need to be removed and re-installed to activate the sensor for it to report quickly to the monitor. If you are using an optional signal booster kit, reposition the booster for a possible better reception.

IV. ALARM MODES

 An alert indicates that you are operating your vehicle in a dangerous condition. When the low pressure light illuminates, STOP and check your tyre(s) as soon as safely possible, and inflate them to the proper pressure.

NOTE: The LSM TYREGUARD® RV360 will illuminate a flashing low tyre pressure warning light and an audible alarm for three minutes when the inflation pressure in one or both tyres is equal to or less than 12.5 % below the programmed baseline air pressure. The warning will continue to illuminate as long as the malfunction exists, whenever the monitor is switched on.

The LSM TyreGuard® RV360 has five types of alarm modes. The warning levels are:

1. 12.5% below the programmed baseline air pressure for the first low-level alarm.
2. The next alarm level is 25% below the programmed baseline air pressure.
3. There is also a FASTLEAK™ warning when 2.8 PSI is lost from the tyre in less than 12 seconds.
4. The optional HIGH PRESSURE warning can be selected when you program the monitor. This alarm will react when the air pressure increases 25% above the programmed baseline air pressure.

5. A LOST SENSOR alarm when the monitor does not receive the RF signal from the sensor.

1. **FIRST STAGE ALARM FOR 12.5% LOW AIR PRESSURE:**

On a first level low pressure alarm the monitor will alarm at 12.5% below the programmed base line air pressure. When this happens the backlight on the monitor screen will light up. The green LED light will go out, the red warning light will begin to flash and the audible beeper will cycle at 1 flash or beep per second, the alarmed wheel position will be displayed. The pressure of the low tyre, and the words LOW PRESSURE will be displayed on the monitor (See Figure 4-1). Pressing any of the buttons or after 100 seconds the audible alarm will be silenced. The monitor will continue to display the wheel position, air pressure of the alarmed wheel position and the words LOW PRESSURE until the problem is corrected. If the alarm comes on and the FAST LEAK icon appears (See Figure 4-2), this means the tyre is losing air at a rate faster than 2.8 PSI in a 12 second period. The FAST LEAK icon will only be displayed during the fast leak and will go out after 18 seconds when the air stops leaking from the tyre. We suggest that the tyre be inspected immediately.

2. **SECOND STAGE ALARM for 25% LOW AIR PRESSURE:**

On a level 2 Low Pressure Alarm the monitor will alarm when the pressure has reached 25% below the programmed baseline air pressure. **The National Highway and Traffic Safety Administration considers a tyre flat when the pressure is 25% below the tyre manufacturers' recommended operating pressure.** When this happens the backlight on the monitor screen will light up. The green LED light will go out, the red warning light will begin to flash and the audible beeper will cycle at 2 flashes or beeps per second, the alarmed wheel position will be shown, the pressure of the low tyre, and the words LOW PRESSURE will be displayed on the monitor similar to Figure 4-1. The screen will display the same information as a Low Pressure Level 1 Alarm. Pressing any of the buttons or after 100 seconds the audible alarm will be silenced. The monitor will continue to display the wheel position, air pressure of the alarmed wheel position and the words LOW PRESSURE until the problem is corrected.

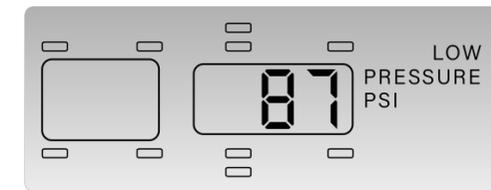


Figure 4-1

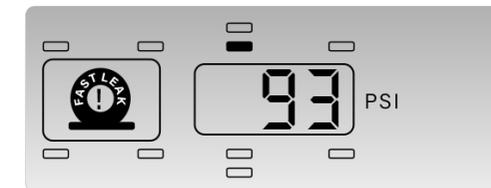


Figure 4-2

If the alarm comes on and the FASTLEAK™ icon appears (See figure 4-2), this means the tyre is losing air at a rate faster than 2.8 PSI in a 12 second period. The FASTLEAK™ icon will only be displayed when a fast leak is detected and will go out after 18 seconds when the air quits leaking from the tyre. We strongly urge you to pull over and inspect the possible tyre damage immediately.

! When the low pressure light illuminates, STOP and check your tyre(s) as soon as safely possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tyre can cause the tyre to overheat and lead to tyre failure. Under-inflation also reduces fuel efficiency and tyres tread life and may affect the vehicle's handling and stopping ability.

3. HIGH PRESSURE ALARM:

The LSM TyreGuard® RV360 monitor is capable of monitoring for a High Pressure Warning. This is a warning that is displayed when the baseline air pressure is exceeded by 25%. When this happens the Green light will go out. The audible beeper will beep once per second and HIGH PRESSURE will be displayed on the monitor screen. This can be caused by extreme heat generated into the tyre.

! When the High-Pressure warning appears, STOP and check your tyre(s) as soon as safely possible, and check for the possible cause. This can happen because of a dragging brake, bad wheel bearing, extreme temperature conditions, or other mechanical failures that you might not detect. It is suggested that you check the suspect tyre position for a possible mechanical failure.

4. LOST SENSOR ALARM:

The LSM TyreGuard® RV360 monitor is capable of monitoring for a lost sensor signal (See Figure 4-3). If the monitor is unable to receive a signal from a sensor for more than 18 minutes an alarm will be displayed for that sensor. This does not mean that the sensor is missing, just that a signal was not able

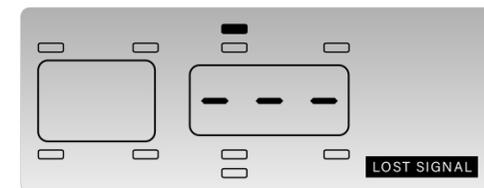


Figure 4-3

to get to the monitor. This could be from other signals interfering with the sensor signal, interference from structures, or a poor signal. By FCC rules we must allow signals from other sources to interfere with our signals. The LSM TyreGuard® RV360 series sensors, as well as all the other TPMS systems on the market are not allowed to interfere with other radio frequency (RF) signals.

5. HOT ALARM:

Hot – Sensor temperature is above 80°C (175°F). This could indicate suspension or wheel component malfunction. When a Hot alarm occurs, HOT will be displayed on the monitor (See Figure 4-4). NOTE, an Under Pressure or Extreme Under Pressure alarm will over-ride a “HOT” alarm because of the potential danger of a low pressure tyre.

 When the HOT warning appears, STOP and check your tyre(s) as soon as safely possible, and check for the possible cause.

 NOTE: A “LOW PRESSURE” warning will over-ride a “HOT” warning because of the potential danger of a low pressure tyre.

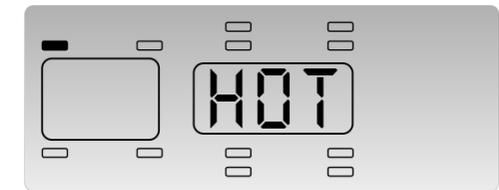


Figure 4-4

VI. NORMAL MODE ACCESSORY FUNCTIONS

DROP AND HOOK FEATURE

This feature allows the operator of the vehicle to drop the monitoring of either the front or the rear vehicle allowing the monitor to only receive the RF signals from the vehicle that is in close proximity to the monitor. The

26

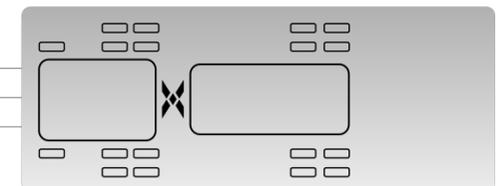


Figure 5-1

operator can drop the trailer and still monitor the car or truck when trips are required without the trailer. The operator of an RV can drop the tow car if it is not required. The process is as follows:

1. Press the front and rear arrow buttons together for 3 seconds.
2. All the programmed wheel positions will be flashing (See Figure 5-1).
3. Press the front or rear button to select the front, back or both sections for the system to monitor. The section that is not selected will drop from the screen (See Figure 5-2 and 5-3).
4. When your selection is made press both the front and rear arrow buttons for 5 seconds and this will lock your selection into the monitor. You will be able to monitor the selected wheel positions as you did when the system was fully operational. The monitor will go into the normal operation mode displaying ON and the green light will be on if the signals have been received and they are within the baseline air pressure ranges.
5. To change or return to the fully operational monitor method repeat the previous instructions in this section. When you change or add a section to the monitor it can take up to 6 minutes for the monitor to capture all the signals that were not previously being monitored. The monitor will return to the normal mode when all selected sensors have reported in and there are no faults.

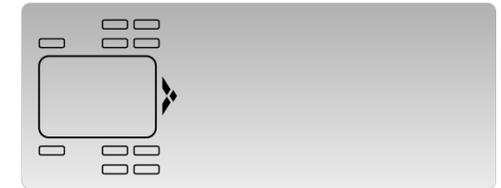


Figure 5-2

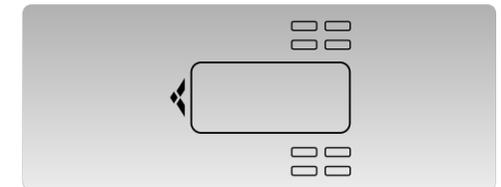


Figure 5-3

SYSTEM RESET

The monitor can be reset to the factory defaults in one easy step. This will erase all the serial numbers from the memory of the monitor and will then need to be re-programmed in order for the monitor to read the sensor signals.

⚠ Be sure this is what you want to do before you proceed. Press and hold the “P” button for 30 seconds. This will erase all sensor information and return the monitor to its factory defaults.

STORED ALARM INFORMATION

The LSM TyreGuard® RV360 has the ability to store the last 10 alarm faults that have occurred. They cannot be erased; they can only be replaced by newer, more recent alarms. This can be useful if a history of alarms is necessary. It is unlikely that the typical RV enthusiast will require this feature. Monitoring the faults and when they occur can be a useful tool for the over the road trucking industry.

To enter this function, press the “P” and “S” buttons together for 3 seconds. A number 1 will be displayed on the screen (See **Figure 6-1**). If no other buttons are pressed within 1 second the monitor will automatically start to show the last alarm and then will show up to the last ten alarms that have occurred from the most recent to the oldest. If you press the “S” button as soon as you enter this mode you can select the alarm of your choosing by using the left and right arrow buttons to select a fault number. Each fault display will last 3 seconds and then there will be a ½ second pause between each display until the “S” button is pressed to display the next alarm:

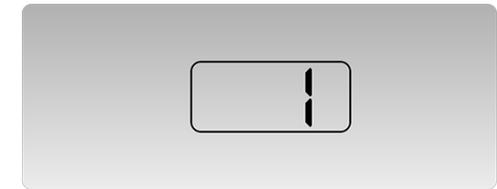


Figure 6-1

Figure 6-2 - Actual pressure of the alarm



Figure 6-2

Figure 6-3 - M07 represents the 7th Month of the Year or July.



Figure 6-3

Figure 6-4 - d04 represents the 4th Day of the Month



Figure 6-4

Figure 6-5 - Y06 represents the Year 2006



Figure 6-5

Figure 6-6 - h14 represents 2:00 PM (24-hour clock)

Figure 6-7 - m33 Represents 33 minutes

To return to Normal Operating mode press and hold the "P" and "S" buttons together for three seconds.



Figure 6-6



Figure 6-7

BACKLIGHT ON FOR NIGHT OPERATION

The backlight will automatically come on for any alarm or if you are viewing the wheel positions in the normal operation mode. The light does not remain on in the normal operation mode when ON is being displayed. To turn on the Backlight press the S button in normal mode and press it again to turn the backlight off.

VII. FAQs AND TIPS

FREQUENTLY ASKED QUESTIONS

DOES THE MONITOR NEED TO BE POWERED BY A LIGHTER ACCESSORY?

No. In fact you will lose some of the benefits of the LSM TyreGuard® RV360 if the monitor is wired in this method. If a hard-wired option is utilised the end user will benefit from the sleep mode option that the system incorporates. This will allow alarms to be received by the monitor but will not allow the monitor to display them or allow the audible alarm to sound until the ignition switch is turned to the ON position. This way occupants are not disturbed during an inconvenient time, but does allow for the alarm to be received before the vehicle is moved.

WHY DID I FAIL TO GET A SIGNAL FROM A SENSOR DURING INSTALLATION?

Higher radio frequency (RF) transmissions travel mostly via straight lines and along line-of-sight pathways. The LSM TyreGuard® RV360 sensors are required to accomplish the difficult task of transmitting a low power FCC approved signal from vehicles' tyres to the monitor. If a sensor fails to be recognised, move the monitor slightly. The vehicle could be in what is known as a Dead Zone this is where the signal is not able to travel because of its surroundings (pole barn siding, metal fence, side of a building). Moving the vehicle just a few feet can sometimes overcome this problem. The sensor will need to be removed and re-installed to activate the sensor for it to report quickly to the monitor. If you are using an optional signal booster kit, reposition the booster for a possible better reception.

WHY DOESN'T MY MONITOR TURN ON?

If the monitor only turns on when the vehicle is running, a switched cigarette lighter receptacle is powering it. A red LED will light on the plug when it receives power. Check fuse in the end of the lighter accessory plug and if needed, replace with a 5 amp fast-blow fuse. If you have hard wired the system to the vehicle, be sure the ignition switch is on and check to see if either of the fuses that were installed inline has blown. Replace all fuses with a 5-amp slow-blow fuse.

HOW DO I MUTE THE AUDIBLE ALERT?

Press any button after the alert sounds. This will put the alert in the Quiet Mode. The green light will have turned off, the alert will be displayed on the screen, and the backlight will be lit. This will continue until the alarm has been corrected.

WHAT IF THE GREEN LED ON THE MONITOR DOES NOT ILLUMINATE?

If the green light on monitor does not come on it will signify that something is not correct with the settings that were input during setup to the monitor. Review the information on the display and if a proper air pressure is being displayed be sure that the baseline for the displayed wheel position was entered correctly.

CAN THE MONITOR BE USED INDEPENDENTLY ON FRONT OR TOW VEHICLE?

Yes - see the Drop and Hook Instructions in the Normal Mode Accessory Functions section.

CAN I STORE MY VEHICLE LONG TERM WITH THE MONITOR ON?

The monitor draws 60mA to 125 mA of power when it is under power and fully functional. The monitor could drain vehicle's battery over an extended period of time. Hooking the monitor up to enable the sleep mode will drastically reduce the power consumption over a long period. If storing for over 3 months, you might consider unplugging the monitor and removing the sensors for storage. (TIP: Clean egg cartons or plastic bags work well for storing the sensors). Each Sensor has its own serial number laser etched into the cover. Be sure to enter these ID numbers in the diagram on page 5 so sensors can be replaced on the same tyre location when re-installing them, eliminating the need for reprogramming. If a low-pressure alert is given while in storage, the sensor will alert until the pressure is corrected and could dramatically affect the battery life of the sensors. Sensors will shut down and stop transmitting when less than 34.5 kpa (5 psi) of air pressure are present. When putting system back on, power monitor first, and then screw sensors onto their original wheel locations. Pressure reading will display within a few minutes on the monitor. Your LSM TyreGuard® RV360 system will now be active.

HOW DO I CHECK THE TYRE PRESSURES?

The pressures are updated to the LSM TyreGuard® RV360 Monitor every 6 minutes under normal circumstances. With the monitor in Normal Mode, press the "S" button and then press the arrow buttons in order to select a tyre's current pressure to display. When you have finished your inspection simply press the set button again to return the monitor to the normal mode.

HOW DO I TURN OFF THE MONITOR'S BACKLIGHT?

The backlight will be illuminated if there is an active alert. Optionally, the backlight can be turned on by pressing the S button. After the monitor has been left idle for 30 seconds, the backlight will turn off automatically. The backlight is not intended to be left on continuously.

WHAT HAPPENS IF A SENSOR IS REMOVED TO INFLATE OR CHECK THE PRESSURE OF A TYRE?

It is recommended that tyre pressures be checked regularly using a quality pressure gauge when the tyres are at ambient temperatures. Remove the sensor, check pressure, and inflate if necessary. When you return the sensor to the valve stem, the sensor will begin to read the current pressure and return to its normal operation.

With the LSM TyreGuard® RV360 system you can air up a low tyre with the tyre being warm and replace the sensor without worrying about the sensor giving a false alarm, like some of the other systems available on the market.

WHAT SHOULD BE DONE IF A LOW PRESSURE ALERT IS SOUNDED?

Immediately pull over and check low tyre. Physically check tyre and repair. Be sure to check valve stem for damage. Soap stem to identify any leaks.

WHAT MAKES MY SYSTEM SENSORS TRANSMIT?

Sensors will transmit data to the monitor under the following conditions:

1. Sensors update with a signal every 6 minutes.
2. Sensors transmit any change of pressure recognised from the static pressure.

WHAT CAUSES THE MONITOR TO DISPLAY ALARMS?

1. Air pressure has dropped 12.5% of your baseline tyre pressure. This alert will continuously transmit once per second until low pressure is corrected or a button is pressed to place Monitor in Quiet Mode.
2. Air pressure has dropped to the second alert level, 25% under your programmed pressures. Alert will transmit twice per second. If a button is not pressed, unit will alert until pressure is corrected or up to 15 hours.
3. A sensor is removed from its tyre.
4. Air pressure is released from the tyre at a rate faster than 19.0 kpa (2.8 psi) in less than 12 seconds. This will initiate a fast leak alert.

DO I NEED TO REBALANCE MY TYRES WHEN USING A SENSOR?

The 17 gram sensor on a typical RV or large truck will not normally necessitate rebalancing tyres. Smaller tyres may require rebalancing.

WHAT SHOULD I DO IF A SENSOR IS LOST OR DAMAGED?

If a Sensor is lost or damaged and needs replacing, call LSM to order a new Sensor.

MY SENSOR WAS BLOWN OFF, (BLOWOUT) WITH NO ALERT GIVEN, WHY?

Instant tyre failure is rare in comparison to the more common failure caused by gradual tyre deflation. It is possible, during an instantaneous blowout, to have the sensor blown off the tyre before it has had a chance to send a signal to the monitor. The LSM TyreGuard® RV360 is not designed for this type of tyre failure. Tyre failure referred to as a blowout, is commonly due to low tyre pressure resulting in an overheating of the tyre sidewalls to the point of disintegration. The LSM TYREGUARD® RV360 is designed solely to monitor tyre pressure. It is not designed to provide warning of a potential or actual tyre blowout.

TIPS

 **TYRE CONDITION:** Conduct a regular visual inspection of the vehicle's tyres. The sensors are not a substitute for proper tyre maintenance and it is the user's responsibility to maintain proper amounts of tyre pressure and respond accordingly to warnings and alerts. Low tyre pressure is not the only problem associated with tyres. Therefore, symptoms such as bulges, uneven tread, abnormal noise, etc. should immediately be brought to the attention of a professional.

ROTATING / REPLACING TYRES: When rotating or replacing tyres, mark wheel location of each sensor. Remove sensors and store in bags or in an egg carton until work is done, and then return the sensors to their original wheel location. You can also delete the sensor positions on the Monitor (page 18), and reinstall the sensors per the instructions on page 10.

RF (Radio Frequency) PRODUCTS: The LSM TyreGuard® RV360 utilises RF technology to transmit a signal between the sensor and the monitor. RF signals are subject to interference from many types of signals and products, which can cause errors in the operation of the product. As with cell phones and other types of electronics using RF signals, signal interruption can occur and cause a lost signal transmission.

REMOTE ANTENNA or INTERIOR / EXTERIOR BOOSTER FOR UNIQUE APPLICATIONS: Due to the unique features of RF signals and the construction and interference from electronics on some RVs and Trucks, a coaxial antenna or RF Booster may be necessary. If needed, contact LSM Technologies.

COOL TEMPERATURES AND HIGH ALTITUDE: These conditions may cause tyres to lose pressure. If a tyre is close to its low-pressure level, an alert can be sounded when pressure drops overnight due to cooler temperatures. Inflate to proper level in the morning.

LIMITED WARRANTY

Full warranty information is available at this link to [LSM Technologies Web Site / About / Terms and Conditions](#).

SPECIFICATIONS

<u>SENSOR</u>		<u>MONITOR</u>	
Sensor Transmit Range	Approx. 40 m (line of sight)	Monitor Power Requirements	12 / 24 VDC; Less than 100 mA when alarmed
Operating Frequency	434.1 MHz FM	Monitor Dimensions	145 mm w x 55 mm h x 28 mm d
Operating Temperature Range	-40 C to +125 C	Monitor Weight	153 grams
Storage Temperature Range	-40 C to +125 C	Monitor Power Cord Plug	Cigarette plug adapter or hard wire
Sensor Weight	Approx. 24 g	Monitor Tyre Positions	1 to 36 positions
Sensor Dimensions	33 mm height x 29 mm diameter	Sensor Alarm Trigger Settings	12.5% and 25% below the original tyre inflation level
Sensor Batteries	Internal, non-rechargeable		
Sensor Pressure Range	69 to 1,300 kpa over operating pressure range		
Sensor Low Voltage Shutdown	2.2 Volts		

Please note that: LSM Technologies has made every endeavour to ensure that this document is correct and up to date without error or omission, however it reserves the right to change its Policies and Procedures from time to time, without notice and at its sole discretion.

REVISION 02 APR 2022 / 2022- TyreGuard RV360 Instructions v2- PW Edits.docx